

INSTALLATION INSTRUCTIONS


1. Grease and assemble 1" x 6" lg. setting bolts to inserts provided.
2. Install inserts typically as shown for your type of installation.
3. After concrete is dry, remove setting bolts and reuse for the next tie-in floor.
4. Use 1" x 5" coil bolts (provided) to install Riverside foot plates as per installation drawings.



1" x 7 3/4" - 4 STRUT

OPEN-COIL INSERT *

(* - MANUFACTURED BY SUPERIOR CONCRETE ACCESSORIES OR EQUAL...)

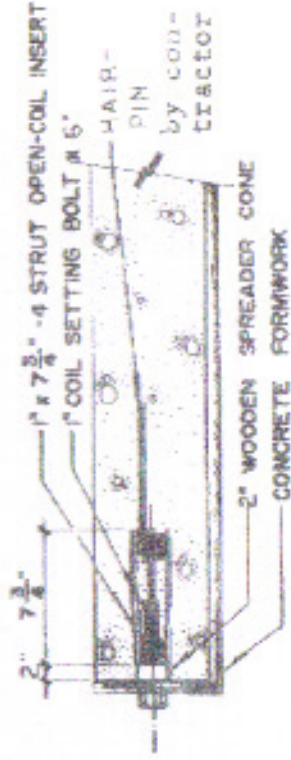


EDGE OF SLAB INSTALLATION

(WITH SETTING BOLT & CONE)

TEMPLATE

2"

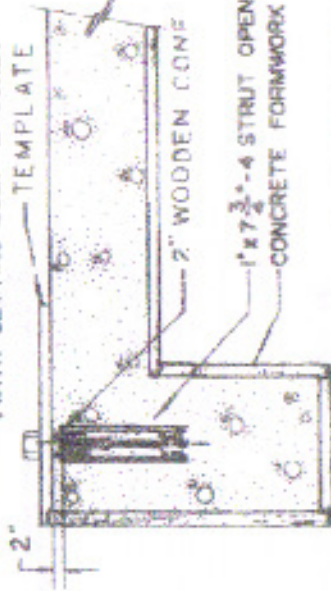

TOP OF SLAB INSTALLATION

DESCRIPTION:

1" x 7 3/4" - 4 STRUT OPEN-COIL INSERTS
(SINGLE)

DATE: 5/19/57

DRAWN BY: AS

DRWG. NO: 700106