


INSTALLATION INSTRUCTIONS

1. Grease and assemble 1"Øx6" lg. setting bolts to inserts provided. (SEE BOTTOM OF SLAB INSTALLATION)
2. Install inserts typically as shown for your type of installation.
3. After concrete is dry, remove setting bolts and reuse for the next tie-in floor.
4. Use 1"Øx4" lg. or 1"Øx5" lg. coil bolts (provided) to install Riverside foot plates as per the hoist installation drawings.

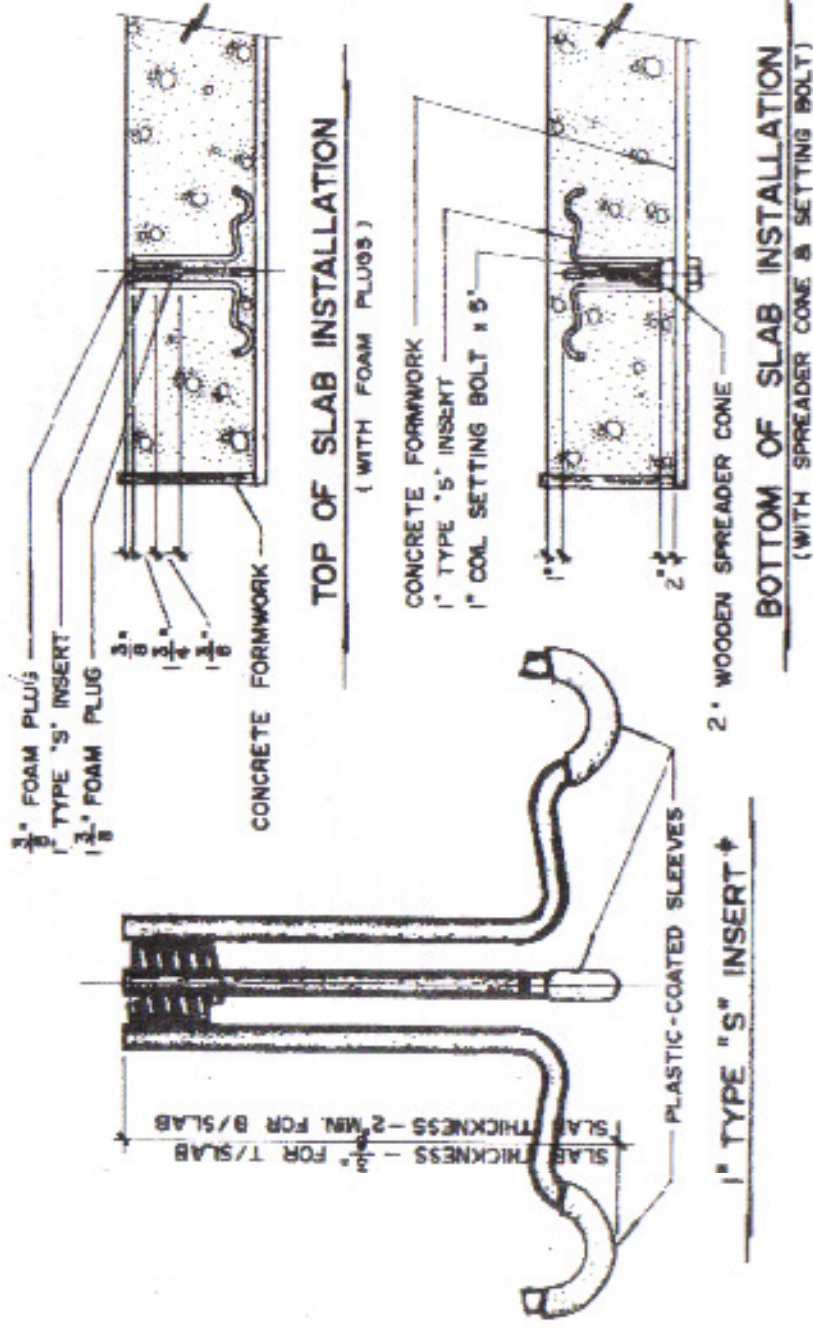

(* - MANUFACTURED BY SUPERIOR CONCRETE ACCESSORIES OR EQUAL...)

DESCRIPTION

1" TYPE "S" INSERTS

DATE: 3/1/83

DRAWN BY: MS

DRWG NO: 100/03